


WHIRLYBIRD INSTRUCTIONS

1. The Whirly can be mounted on any surface, horizontal or vertical.
2. The Optional Stand is available for any other surface.
3. Mount the whirly securely with screws or other type of hardware.
4. The mounting tabs have bendable joints for screwing into vertical surfaces.
5. The position of the whirly is **critical**. Center the panel due south. See Fig.1
6. Install the antennas by screwing the studs into the top cone. **DON'T OVER TIGHTEN!**
7. Carefully pull the antennas no more than 1 inch from the edge of the desired coverage area. (Up to 2.5 feet each)
8. Weather conditions may effect start up and shut down times.

Fig. 1 Top View

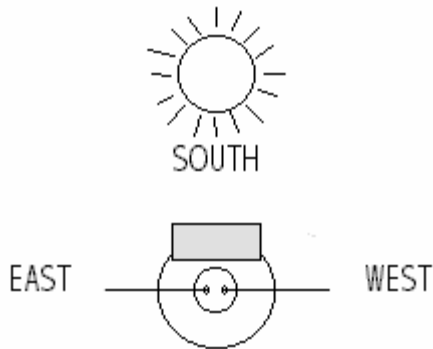

For more info or to send us a question www.nobirds.com

Note for Boaters

Whirly can be mounted with bungee cords, string or other tie downs.
Whirly does not need to be removed when boat is being used.
Optional Sandbag mount available

Antenna Care Info: If moving antennas in after they have been out in the weather, we suggest wiping them down first with a lubricant (ie:WD-40).